



1854132

X-Stanton Open Bookcase-CG

Parts and Hardware List

A.	Top Panel	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Bottom Panel	1 pc
E.	Back Panel	1 pc
F.	Front Rail	1 pc
G.	Adjustable Shelves	2 pcs
H.	Connecting Bolts	10 pcs
I.	Eccentric Cams	10 pcs
J.	Plastic Caps	10 pcs
K.	Shelf Supports	8 pcs
L.	Pan Phillips Head Screws	20 pcs
M.	Flat Phillips Head Screws	1 pc
N.	Phillips Head Screwdriver	1 pc
O.	Flat Head Screwdriver	1 pc
P.	Mounting Plates	2 pcs

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.




1854132

X-Stanton Open Bookcase-CG


Hardware Illustrations




H. Connecting Bolt

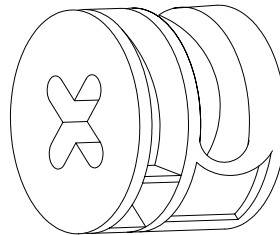


I. Eccentric Cam

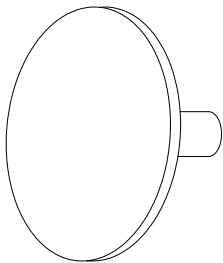


J. Plastic Cap



K. Shelf Support



L. Pan Phillips Head Screw



M. Flat Phillips Head Screw



1854132

X-Stanton Open Bookcase-CG

Attach Left & Right Side Panels, Top Panel

Parts required

A.	Top Assembly	1 pc	I.	Eccentric Cams	10 pcs
B.	Left Side Panel	1 pc	J.	Plastic Caps	10 pcs
C.	Right Side Panel	1 pc	M.	Flat Phillips Head Screws	1 pc
D.	Bottom Panel	1 pc	N.	Phillips Head Screwdriver	1 pc
F.	Front Rail	1 pc	O.	Flat Head Screwdriver	1 pc
H.	Connecting Bolts	10 pcs			

1. **Attach Connecting Bolts (H)** Insert the exposed threads on the Connecting Bolts (H) into the pre-threaded holes in the Top & Bottom Panels (A, D), Left & Right Side Panels (B, C). Tighten in a clockwise direction using the Flat Head Screwdriver (O). See Illustration #1.
2. **Attach Front Rail (F)** Align the Connecting Bolts (H) in the Left & Right Side Panels (B, C) with the pre-drilled holes in the ends of the Front Rail (F). Insert the Eccentric Cams (I) into the pre-drilled holes in the Front Rail (F). Make sure the groove in the Eccentric Cams (I) faces out and the arrow points toward the Connecting Bolts (H). Use the Phillips Head Screwdriver (N) to adjust the Eccentric Cams (I) to lock the Connecting Bolts (H) in place by turning in a clockwise direction. Cover all the Eccentric Cams (I) with the Plastic Caps (J). Insert the Flat Phillips Head Screw (M) through the pre-drilled hole in the Front Rail (F) and into the Top Assembly (A). Tighten by turning in a clockwise direction. See Illustration #1.
3. **Attach Top & Bottom Panels (A)** Align the Connecting Bolts (H) in the Top & Bottom Panels (A, D) with the pre-drilled holes in the Left & Right Side Panels (B, C). Be sure the dowels in the Left & Right Side Panels (B, C) align with the pre-drilled holes in the Top & Bottom Panels (A, D). Insert the Eccentric Cams (I) into the pre-drilled holes in the Left & Right Side Panels (B, C). Make sure the groove in the Eccentric Cams (I) faces out and the arrow points toward the Connecting Bolts (H). Use the Phillips Head Screwdriver (N) to adjust the Eccentric Cams (I) to lock the Connecting Bolts (H) in place by turning in a clockwise direction. Cover all the Eccentric Cams (I) with the Plastic Caps (J). See Illustration #1.

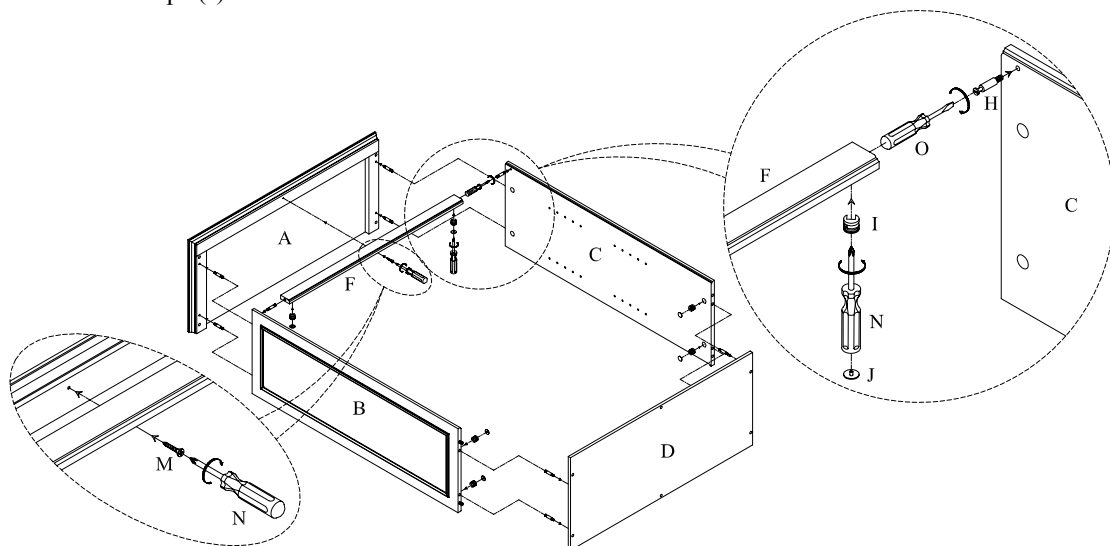


Illustration #1



1854132

X-Stanton Open Bookcase-CG

Attach Back Panel & Adjustable Shelves

Parts required

A. Top Assembly	1 pc	G. Adjustable Shelves	2 pcs
B. Left Side Panel	1 pc	K. Shelf Supports	8 pcs
C. Right Side Panel	1 pc	L. Pan Phillips Head Screws	16 pcs
D. Bottom Panel	1 pc	N. Phillips Head Screwdriver	1 pc
E. Back Panel	1 pc		

4. **Attach Back Panel (E)** Place the Back Panel (E) into the grooves in the Left & Right Side Panels (B, C) and Top Assembly (A) & Bottom Panel (D). Secure in place with Pan Phillips Head Screws (L) using the Phillips Head Screwdriver (N). See Illustration #2.
5. **Attach Adjustable Shelves (G)** Insert the Shelf Supports (K) into the desired pre-drilled holes in the Left & Right Side Panels (B, C). Place the Adjustable Shelves (G) onto the Shelf Supports (K). See Illustration #2.

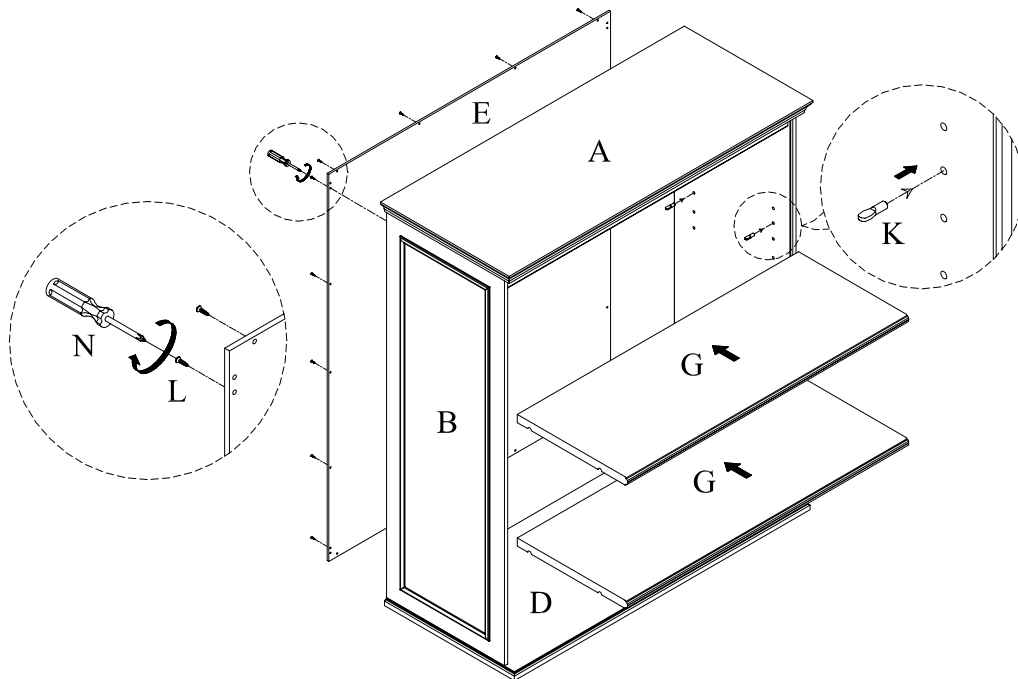


Illustration #2



1854132

X-Stanton Open Bookcase-CG

Attach Open Bookcase to Stanton Credenza

Parts required

L.	Pan Phillips Head Screws	4 pcs	P.	Mounting Plates	2 pcs
N.	Phillips Head Screwdriver	1 pc			

6. **Attach Mounting Plates (P)** Set the Stanton Open Bookcase assembly on top of the Stanton Credenza assembly. Align the pre-drilled holes in the Mounting Plates (P) with the pre-drilled holes in the backs of the upper bookcase and the lower bookcase. Secure in place with the Pan Phillips Head Screws (L) using the Phillips Head Screwdriver (N). See Illustration #3.

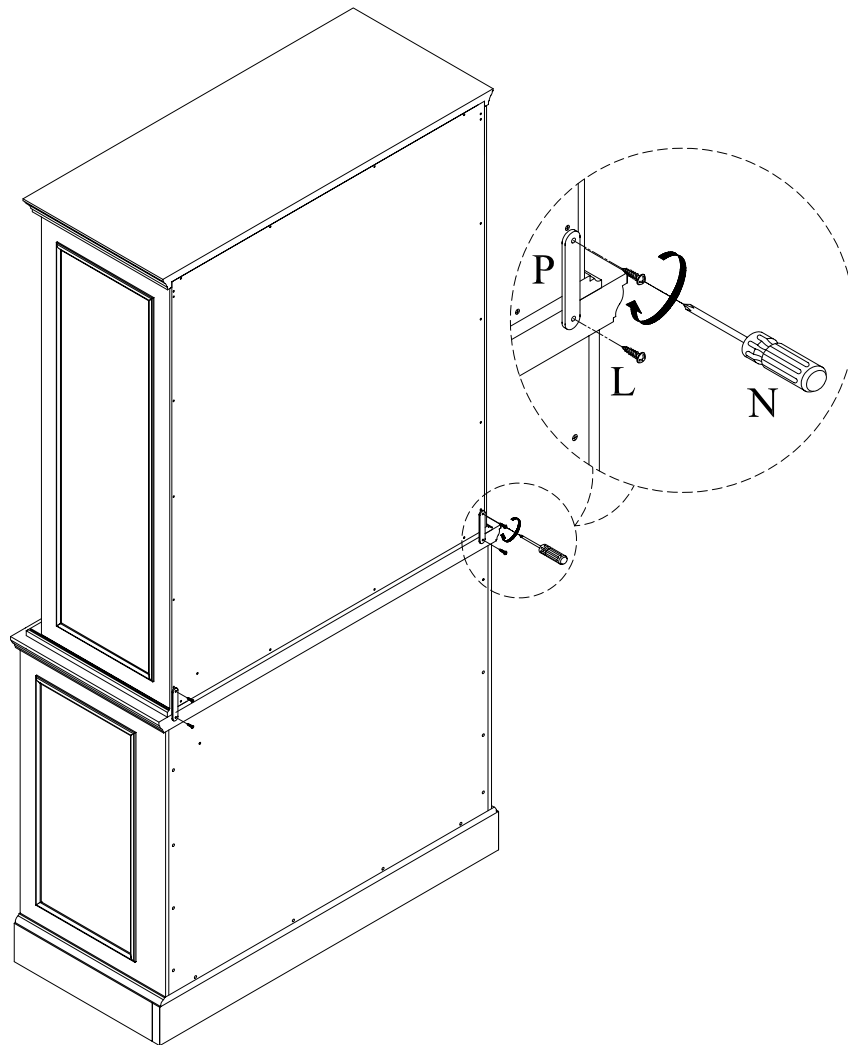


Illustration #3